
Useful functions

Viewing program details

While watching a program or selecting a program to watch from the EPG or list...



Icons that indicate the program features

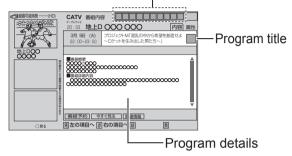

■ When you want to see details of the program indicated by the icon

Press . (returns to the program details.)

Switching audio

For multi-language broadcasts (dual language broadcasts, multiple languages)...

Press 語順

- The audio changes each time the button is pressed.
- (Includes one main and ■ Dual audio one sub audio channel)





(Includes multiple audio ■ Multi-Audio channels)



Information

 
 Some broadcasts may have the foreign language on the "主" (Main) and Japanese on the "副" (Sub) channel.

Displaying program titles etc.

While watching a program...

Press 画标


-Information about the program (Service name, title, start/end time)



1 ⁵ to 12 ‡

(Blank at all other times)

 indicator



■ BS 301



Press 画 again and the display disappears.

Watching data broadcasts

While watching digital broadcasts...



Press @F-9



- It may take time to display if there is a lot of information.
- Some programs do not have data broadcasts.
- Select the item you want to see using AVID, and press (決定)
 - Use the color buttons in the EPG to display special selection screens or number input screens. Follow the on-screen instructions.

Press @7-9 again to return to the television broadcast.

Information


 There is a dedicated channel for data broadcasting only. (You can view by selecting channels as normal.)

Panasonic

Quick Guide

CATV Digital Set Top Box TZ-LS300 Series TZ-LS200 Series

Watching digital programs

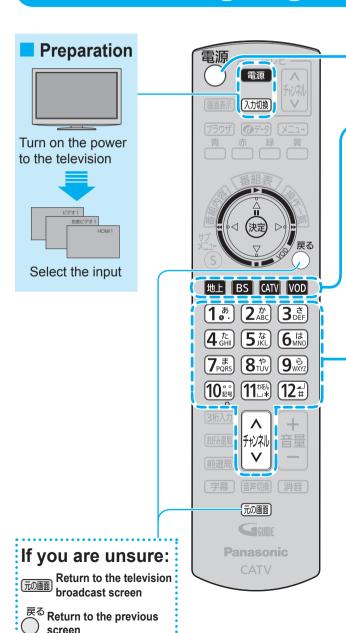

Turn on the power

If the channel select system is "プリセット" (Preset):

- Select the broadcast type
- ※ If the channel select system is "3桁入力" (3-digit input), go to step 3
- Broadcast select button
- Terrestrial digital broadcasts
- **BS** Satellite digital broadcasts
- **CAN** CATV digital broadcasts

(If there are multiple CATV broadcasts, cycle through by pressing the button.)

WD VOD service

*This service may not be offered, depending on the service contract with your cable television station.

- Select the channel
- Channel select button



■ If the channel select system is "3桁入力" (3-digit input), input the 3-digit channel

> (Specifically, refer to the Operating Instructions.)

 If the channel select system is "プリセット" (Preset), it will change to the channel assigned to the button. (Specifically, refer to the Operating Instructions.)



Each time you press the button, a channel that was set in the channel select target is selected. (Specifically, refer to the Operating Instructions.)


TQBX7039

Choosing the program using the EPG

An Electronic Program Guide (EPG) is displayed on the screen. (programs for up to 8 days, depending on your cable television station)

While watching a program



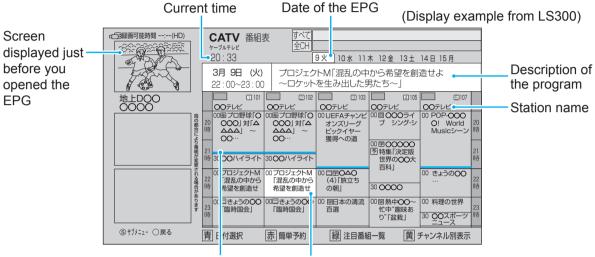

A blue line indicates a short program. If you place a cursor on a blue line, the program information will be displayed.

Selected program (highlighted yellow) (A PIN input screen is displayed when a program that is set with viewing restrictions is selected.)

Watching a program broadcasting (Watch now)

Select a desired program currently being broadcast using **▲▼ ♦** while displaying the EPG, and press (未定)



Program detailed contents

Use ◀▶ to select "今すぐ見る" (Watch now), and press (**)



Switching the EPG display

Changing the EPG date and time

- Press mwhen the EPG is displayed
- Use ▲▼ to select '日付" (Date) "時間" (Time) and use ◀ ▶ to set the items. and press (決定)

番組表日時選択	
日付	12(金)
時間	15時

Displaying the EPG for separate channels

You can display the EPG for a maximum of 8 days for one channel.

 
- Press when the EPG is displayed
 - Press when the EPG is displayed for one channel to switch back to the full channel display.

Changing the number of channels displayed in the EPG

- Press (s) when the EPG is displayed
- Use ▲▼ to select "表示チャ ンネル数" (No. of Channels) and press 陳
- Use ▲▼ to select the number of channels that you want to display, and press (**)

Displaying the EPG for a different broadcast

- Press **♦** when the EPG is displayed
 - →The broadcast stations change in order each time the button is pressed.



(Differs depending on your contracted cable television stations.)

You can also switch broadcasts using





